# **UNI EN ISO 9001:2008**

# **CEAM Control Equipment srl**

**Headquarters:** 

Via Val D'Orme No.291 50053 Empoli (FI) Italy

Phone (+39) 0571 924181 - Fax (+39) 924505

Skype Name: ceam\_info

General Email: info@ceamgroup.it

Customer Service: sales@ceamgroup.it

### Web

Group: www.ceamgroup.com

Instrument Dep: www.ceamcontrolequipment.it

Support: www.ceamsupport.it

EAM Control equipment®

Local Reselle	<u>r:</u>		











Short User Manual Version 1.0 File: IF95 UK M2

### 1 - DESCRIPTION

This instrument combine non-contact infrared thermometer and probe thermometer it can measure the surface and inside temperature of object, professional in food measurement

### 2 - SPECIFICATION

IF Range (Infrared): -40÷280 °C (-40÷536 °F) Probe Range: -40÷230 °C (-40÷446 °F)

IF Accuracy: Range -40÷20°C (-40÷68.0 °F) =  $\pm$ 3°C (5,4°F)

Range  $20 \div 280^{\circ}$ C  $(68.0 \div 536^{\circ}$ F) =  $\pm 1\% \pm 1^{\circ}$ C

Probe Accuracy: Range 0÷230°C = ±1% ±1°C - ±2°C Sotto 0°C

Resolution: 0.1 Repeatability: <1°C Response Time: <500 ms

IF Optical Rate D/S: 4:1 (Distance: Target Diameter)

Housing: IP.65 - Waterproof

Power Supply: 2X Batterie AAA Size

# 3 - IF.95 Legend

### **General**

- 1 IF Infrared Sensor
- 2 LCD Backlight Display
- 3 SCAN Button
- 4 Lighting Button
- 5 SET Button
- 6 Retractile Probe
- 7 Lighting LED

### **Display**

- 1 IF Measure Symbol (NON Contact)
- 2 IF Measure HOLD
- 3 Temeprature Unit
- 4 Measure Data
- 5 Low Battery Symbol
- 6 Probe Symbol
- 7 Hi/Low Alarm Symbol

### 4 - Istruction

### 4.1 IF Measure (Infrared)

- A Press SCAN button and point it toward the surface to be measured. The display will light if the battery is good. Replace the battery if the display does not light.
- B While measuring, the scan symbol will appear in the upper left hand corner LCD
- C Release the SCAN button and HOLD display icon will appear on the LCD indicating that the reading is being held.
- D The meter will automatically power down after approximately 7 sec. after the button is released

#### 4.2 Probe Measure

- A Put down the probe, the LCD will display the probe temperature
- B While measuring, the probe measure icon will appear in the down of the LCD
- C Close probe, the probe will power off the meter





### 4.3 Change Temperature Unit °C/°F

Press the SET button five times, the C/F symbol will flash, then press the LIGHT or SCAN button to change the unit. Presso SET to confirm

#### 4.4 SET Allarm

- A Press SET button one time to seti high alarm value, pressing SCAN button to up the value and press LIGHT button to down the vaule.
- B Press SET button two times to set high alarm ON/OFF, pressing SCAN or LIGHT button to switch ON7OFF the high Alarm
- C Press SET button three times to set Low Alarm value, pressing SCAN button to up the value and LIGHT button to down the value.
- D Press SET button four times to set Low Alarm On/Off, pressing SCAN or LIGHT button switch On/Off the High Alarm.

#### 4.5 Note

- A Instrument is IP.65, probe can be cleaned, but can not make steam and smog into infrared induction reagion, or it will affect the accuracy.
- B Please do not take down the probe

### 5 - Maintenance

- A Clean the housing with soft cloth, do not let any liquid in to IF induction region
- B Clean the probe Before/After using the probe or disinfect it with water or cleaner
- C Use montly CEAM C430 Blackbody calibraton to verify the calibration

## 6 - Battery Replacement

Open the battery cover, remove the battery, put in the new 2 x AAA Battery and close the battery cover

